



Unplug two cables

Loosen the setscrews on the elbow at the top of the Touch Screen
Slide the screen and elbow from the post
guiding the unplugged cables thru the elbow

